

iSC GmbH

Customer Service

Eschenstraße 6

94405 Landau an der Isar

Telefon: +49 (0) 180 / 5120509 (14ct/min)

Fax: +49 (0) 180 / 5835830 (14ct/min)

 
eMail: info@isc-gmbh.info

[www.isc-gmbh.info](http://www.isc-gmbh.info)

**isc**

Akku-Handstaubsauger

Artikel-Nr.:  
Ident-Nr.:

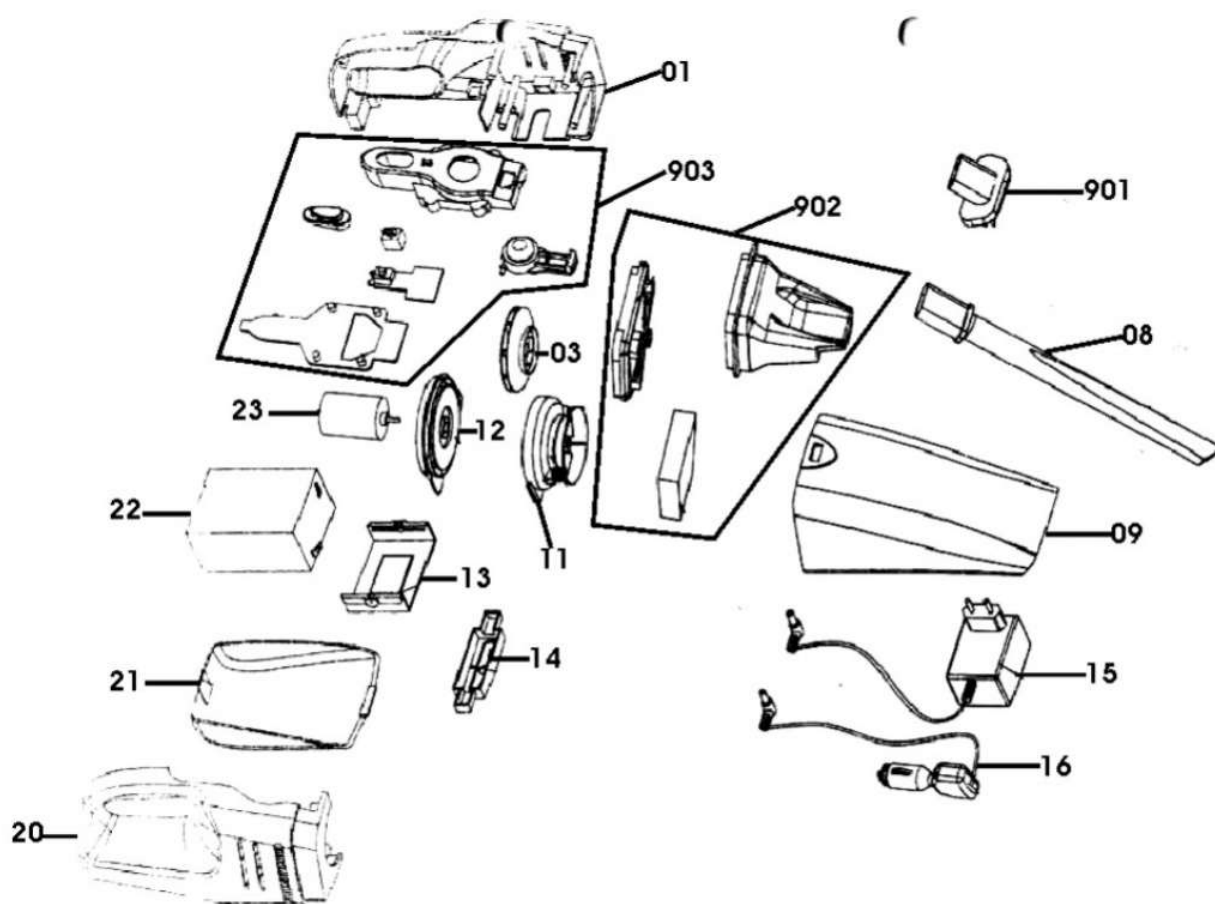

## Komponenten / Ersatzteile

Position	Artikel-Nr.	Beschreibung
8	234711001004	nozzle
16	234711001002	car charger
901	234711001003	cap
902	234711001008	filter
903	234711001009	switch assy

 
 
 
GB Operating Manual  
Cordless Hand-Held Vacuum Cleaner



EH-Art.-Nr.: 23.471.15  
Art.-Nr.: 5765

I.-Nr.: 01016

**D6 VHHC**

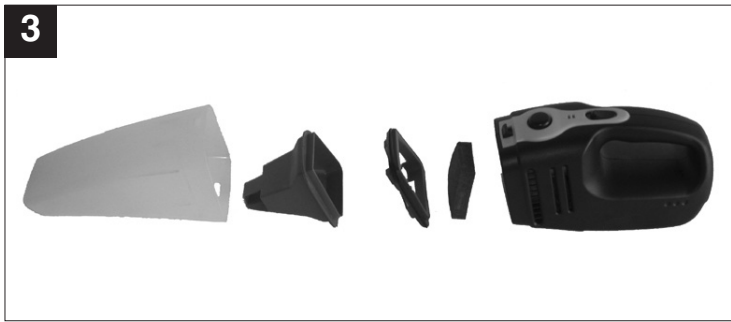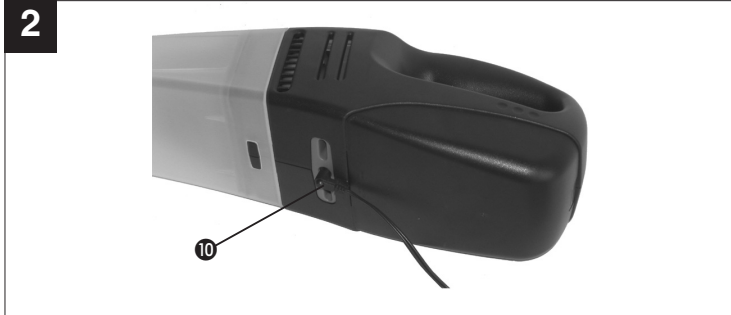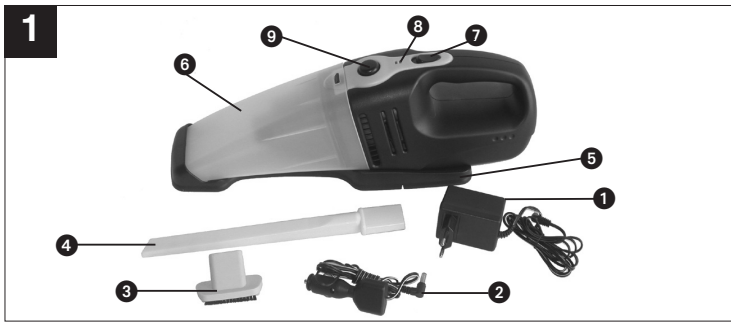

**Important:**

Read and follow the instructions and safety information before using for the first time!

**You must follow the instructions set out below at all times before, during and after using the appliance:**

- Never vacuum glowing or burning matches, glowing ashes or cigarette butts, burning, caustic or explosive materials, vapors or liquids.
- This cordless hand-held vacuum cleaner is not suitable for vacuuming harmful dust.
- Protect the cordless hand-held vacuum cleaner and its charger from rain.
- This cordless hand-held vacuum cleaner is not suitable for toxic materials.
- Do not vacuum organic solvents or acids.
- Never clean any part of the cordless hand-held vacuum cleaner in a dishwasher or other cleaning machine.
- Do not use petrol or other inflammable liquids to clean the appliance.
- Never clean the appliance with solvents.
- Do not dispose of exhausted batteries in a fire. They may explode!
- Avoid contact with a leaking battery pack. In case of accidental contact, wash the affected area of skin with soap and water. If battery acids gets in your eye, rinse out the eye with clear water for at least 10 minutes and seek a doctor's advice immediately.
- Protect the battery charger and its cable from damage and sharp edges. Have damaged cables repaired without delay by a qualified electrician.
- Check your tools for damage. Repairs may only be completed by a trained electrician.
- Make sure that the contacts of the battery pack do not come into contact with other metallic objects such as nails or screws. There is a risk of short-circuiting!
- Keep the charger and cordless hand-held vacuum cleaner out of the reach of children.
- The mains adapter and mains lead must not come into contact with moisture since otherwise the user may suffer an electric shock.
- The motor section must not be immersed in liquids. Only dip the tip of the cleaner into liquids if you wish to vacuum them. Only vacuum small quantities of liquid. Hold the collection tank at the

bottom for this purpose so that the liquid cannot ingress into the motor.

- Do not use the appliance to collect small parts.
- Ensure that the ventilation slits on the appliance are not blocked with dust or the like.
- The cordless vacuum cleaner must not be connected to the mains adapter during use.
- Do not use the appliance if there are visible signs of damage on it, its mains adapter or its mains lead.
- Do not insert any items into the openings in the appliance.
- Never use the appliance without a filter.

**Important information:**

**Before you start to use your cordless hand-held vacuum cleaner it is essential that you read the following instructions:**

1. The battery pack supplied with the tool is not charged. The battery pack has to be charged before you use the tool for the first time.
2. Charge the battery pack with the charger supplied. An empty battery pack requires a charging period of approximately 8 hours. Do not use the supplied charger to charge other items of equipment.
3. The battery pack does not reach its maximum capacitance until it has been charged and discharged approximately five times.
4. Battery packs lose their charge even when they are not being used. Regular charging is therefore recommended.
5. Please check the data marked on the rating plate of the battery charger. Be sure to connect the battery charger to a power supply with the voltage marked on the rating plate. Never connect it to a different mains voltage.
6. If it is used heavily, the battery pack will get hot. Allow the battery pack to cool to room temperature before starting the charging process.

**Layout (Fig. 1/2)**

1. Power supply unit
2. DC adapter
3. Nozzle for vacuuming liquids
4. Crevice tool
5. Wall holder
6. Collection tank
7. On switch
8. Control lamp
9. Release button for the tank
10. Charging jack

GB

**Starting up:****Charging the battery pack (Figure 2)**

1. Check that your mains voltage is the same as that marked on the rating plate of the battery charger. Plug the charger into the socket and connect the charging cable to the charging jack (10) on the cordless vacuum cleaner.
2. The red LED indicates that the battery pack is charging. The time it takes to fully recharge an empty battery is approximately 8 hours. The charging time for a partially charged battery is comparatively less. The temperature of the battery pack may rise slightly during the charging operation. This is normal.  
**Important! When the battery pack is fully charged the charger does not cut out automatically, please remember to unplug the charger once the unit is fully charged as failure to do so will damage the battery. DO NOT LEAVE** the unit on charge continuously this will damage the battery.

If the battery pack fails to charge, please check

- whether there is voltage at the socket-outlet
- whether there is perfect contact to the charging jack on the cordless hand-held vacuum cleaner.

If the battery pack still will not charge, please send

- the power supply unit
- and the cordless vacuum cleaner

to our after-sales service department.

To ensure that the battery pack provides long service you should take care to recharge it promptly. This is definitely required if you find that the power of the cordless hand-held vacuum cleaner falls.

Never fully discharge the battery pack. This will cause it to develop a defect.

**Operation (Figure 1)**

Take the cordless hand-held vacuum cleaner out of its mounting (5) and slide the On switch (7) forwards. The vacuum cleaner will stop automatically when you release the On switch. The green LED indicates that the vacuum cleaner is operating. Before you vacuum any liquids or wet items, empty the dust tank and clean the filter.

The dust tank (6) can be removed and emptied by pressing the release button (9). We recommend that you empty the dust tank after each time you use the vacuum cleaner.

**Filter cleaning (Figure 3)**

Clean the dirty filter with soap suds and then hang it up to dry. Insert the dry filter and start the vacuum cleaner again.  
Ensure that all the individual parts have been assembled again correctly.

 
**Technical data:**

Motor voltage supply	6 V=
Battery charging voltage	9 V=
Battery charging current	450 mA
Charger mains voltage	230 V ~ 50 Hz

**Ordering replacement parts**

Please quote the following data when ordering replacement parts:

- Type of machine
  - Article number of the machine
  - Identification number of the machine
  - Replacement part number of the part required
- For our latest prices and information please go to [www.isc-gmbh.info](http://www.isc-gmbh.info)

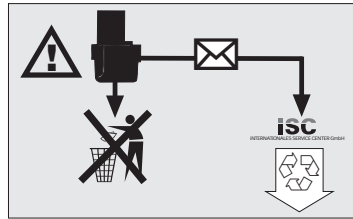

Ⓢ Rechargeable batteries and cordless electric machines and tools contain materials that are potentially harmful to the environment. Never place any cordless electric machines or tools in your household refuse. When cordless electric machines or tools become defective or worn, remove the rechargeable batteries and return them to iSC GmbH Eschenstrasse 6, D-94405 Landau, Germany. If the rechargeable batteries cannot be removed, return the complete cordless machine or tool. You can then be sure that the equipment will be correctly disposed of by the manufacturer.

**Einhell AG**  
**Wiesenweg 22**  
**D-94405 Landau/Isar**

## Konformitätserklärung



- Ⓢ erklårt folgende Konformität gemäß EU-Richtlinie und Normen für Artikel
- Ⓢ declares conformity with the EU Directive and standards marked below for the article
- Ⓢ déclare la conformité suivante selon la directive CE et les normes concernant l'article
- Ⓢ verklaart de volgende conformiteit in overeenstemming met de EU-richtlijn en normen voor het artikel
- Ⓢ declara la siguiente conformidad a tenor de la directiva y normas de la UE para el artículo
- Ⓢ declara a seguinte conformidade de acordo com a directiva CE e normas para o artigo
- Ⓢ förklarar följande överensstämmelse enl. EU-direktiv och standarder för artikeln
- Ⓢ ilmoittaa seuraavaa Euroopan unionin direktiivien ja normien mukaista yhdenmukaisuutta tuotteelle
- Ⓢ erklærer herved følgende samsvar med EU-direktiv og standarder for artikkelen
- Ⓢ заявляє о відповідності товару наступним директивам і нормам ЄС
- Ⓢ izjavljuje sljedeću usklađenost s odredbama i normama EU za artikl.
- Ⓢ declară următoarea conformitate cu linia directoare CE și normele valabile pentru articolul.
- Ⓢ ürün ile ilgili olarak AB Yönetmeliğindeki ve Normları gereğince aşağıdaki uygunluk açıklarına mes'umiyetimi sunar.
- Ⓢ δηλώνει την ακόλουθη συμμόρφωση με την Οδηγία ΕΕ και τα πρότυπα για το προϊόν

- Ⓢ dichiara la seguente conformità secondo la direttiva UE e le norme per l'articolo
- Ⓢ atesteterer følgende overensstemmelse i henhold til EU-direktiv og standarder for produkt
- Ⓢ prohlašuje následující shodu podle směrnice EU a norem pro výrobek.
- Ⓢ a következő konformitást jelenti ki a termékerek vonatkozó EU-irányvonalak és normák szerint
- Ⓢ pojasnjuje sledečo skladnost po smernici EU in normah za artikel.
- Ⓢ deklaruje zgodność wymienionego poniżej artykułu z następującymi normami na podstawie dyrektywy WE.
- Ⓢ vydáva nasledujúce prehlásenie o zhode podľa smernice EÚ a noriem pre výrobok.
- Ⓢ декларира следното съответствие съгласно директивите и нормите на ЕС за продукта.
- Ⓢ заявляє про відповідність згідно з Директивою ЄС та стандартами, чинними для даного товару
- Ⓢ deklareerib vastavuse järgnevale EL direktiivi dele ja normidele
- Ⓢ deklaruoja atitiktį pagal ES direktyvas ir normas
- Ⓢ strajpaušii
- Ⓢ izjavljuje sledeći konformitet u skladu s odredbom EZ i normama za artikl
- Ⓢ Atbilstības sertifikāts apliecina zemāk minēto preču atbilstību ES direktīvām un standartiem

### Akku-Handsauger D6 VHHC

- |  |   |
|--|---|
| <input type="checkbox"/> 98/37/EG                        | <input type="checkbox"/> 87/404/EWG       |
| <input checked="" type="checkbox"/> 73/23/EWG_93/68/EEC  | <input type="checkbox"/> R&TTED 1999/5/EG |
| <input type="checkbox"/> 97/23/EG                        | <input type="checkbox"/> 2000/14/EG:      |
| <input checked="" type="checkbox"/> 89/336/EWG_93/68/EEC | <input type="checkbox"/> 95/54/EG:        |
| <input type="checkbox"/> 90/396/EWG                      | <input type="checkbox"/> 97/68/EG:        |
| <input type="checkbox"/> 89/686/EWG                      |   |

**EN 61558-2-6; EN 61558-1; EN 55014-1; EN 55014-2;  
 EN 61000-3-2; EN 61000-3-3**

Landau/Isar, den 20.02.2006

*Brunhölzl*

Brunhölzl  
 Leiter Produkt-Management

*Karg*

Karg  
 Produkt-Management

Art.-Nr.: 23.471.15 I.-Nr.: 01016 Archivierung: 2347110-46-4155050  
 Subject to change without notice

Ⓢ WARRANTY CERTIFICATE

The product described in these instructions comes with a 3 year warranty covering defects. This 3-year warranty period begins with the passing of risk or when the customer receives the product.

For warranty claims to be accepted, the product has to receive the correct maintenance and be put to the proper use as described in the operating instructions. **Your statutory rights of warranty are naturally unaffected during these 3 years.**

This warranty applies in Germany, or in the respective country of the manufacturer's main regional sales partner, as a supplement to local regulations. Please note the details for contacting the customer service center responsible for your region or the service address listed below.

Ⓢ Einhell UK Ltd  
Unit 5 Morpeth Wharf  
Twelve Quays  
Birkenhead, Wirral  
CH 41 1LF

Helpline-No.: GB 0044 151649 1500  
IRL 189 09 46244

Ⓢ Technical changes subject to change





 
 
Ⓢ For EU countries only

Never place any electric tools in your household refuse.

To comply with European Directive 2002/96/EC concerning old electric and electronic equipment and its implementation in national laws, old electric tools have to be separated from other waste and disposed of in an environment-friendly fashion, e.g. by taking to a recycling depot.

Recycling alternative to the demand to return electrical devices:

As an alternative to returning the electrical device, the owner is obliged to cooperate in ensuring that the device is properly recycled if ownership is relinquished. This can also be done by handing over the used device to a returns center, which will dispose of it in accordance with national commercial and industrial waste management legislation. This does not apply to the accessories and auxiliary equipment without any electrical components which are included with the used device.



©

The reprinting or reproduction by any other means, in whole or in part, of documentation and papers accompanying products is permitted only with the express consent of ISC GmbH.

EH 02/2006

