

ISC GmbH

Customer Service

Eschenstraße 6

94405 Landau an der Isar

Telefon: +49 (0) 180 / 5120509 (14ct/min)

Fax: +49 (0) 180 / 5835830 (14ct/min)


eMail: info@isc-gmbh.info

[www.isc-gmbh.info](http://www.isc-gmbh.info)

**isc**

Petrol Chain Saw

Artikel-Nr.:  
Ident-Nr.: 01018

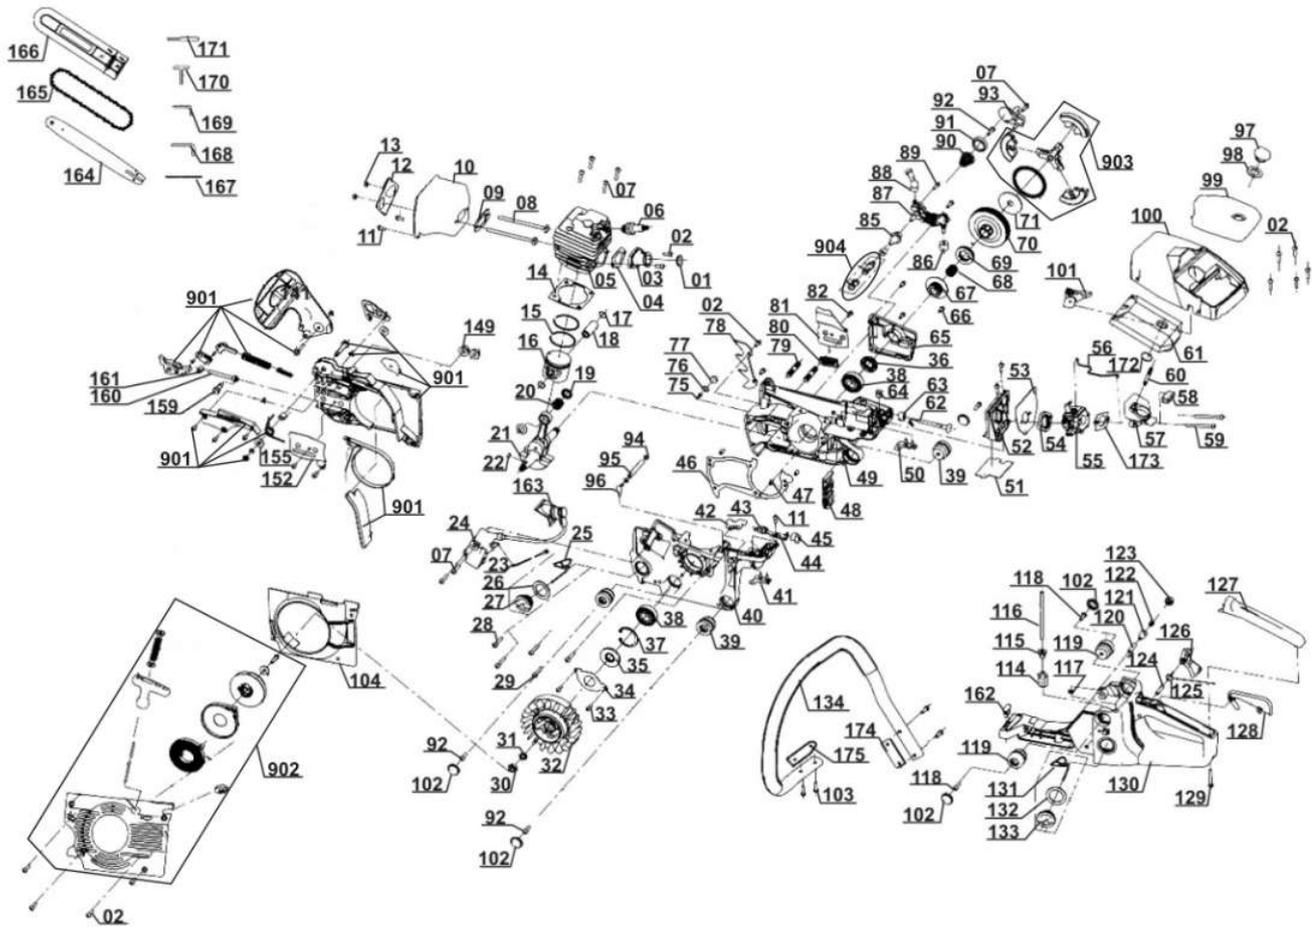

## Komponenten / Ersatzteile

Position	Artikel-Nr.	Beschreibung	Position	Artikel-Nr.	Beschreibung
6	450139001006	SPARK PLUG LDL7T	55	450139001055	Carburetor
10	450139001010	MUFFLER	61	450139001061	FILTER-AIR
15	450139001015	RING-PISTON	78	450139001078	SPIKE
16	450139001016	PISTON	87	450139001087	OIL PUMP
17	450139001017	RING -SNAP D11	93	450139001093	PAD-RIGHT
18	450139001018	PIN-PISTON D11x34 D11x34	97	450139001097	KNOB-AIR FILTER für Luftfilter
24	450139001024	ELECTRONIC IGNITION	98	450139001098	RUBBER-WASHER
27	450139001027	OIL CAP	99	450139001099	COVER-AIR FILTER für Luftfilter

## Komponenten / Ersatzteile

Position	Artikel-Nr.	Beschreibung
114	450139001114	OIL FILTER
126	450139001126	TRIGGER
127	450139001127	COVER-REAR HANDLE für Handgriff
128	450139001128	LEVER-SAFETY TRIGGER für Sicherheitsschalter
133	450139001133	GASOLINE CAP
134	450139001134	Additional HANDLE
166	450139001166	18" GUIDE BAR COVER der Leitschiene
901	450139001901	side cover cpl
902	450139001902	starter cable cpl
903	450139001903	clutch cpl.
904	450139001904	oil filter cpl.
0	450139001178	MIX TANK
0	450139001186	rubber valve
0	450139001187	air escape valve for tank für Benzintank



GARDENLINE®



# GLPC4645 PETROL CHAINSAW

PETROL CHAINSAW

**16<sup>m/s</sup>**  
CHAIN  
SPEED

INCLUDES  
SOFT CARRY  
CASE

OVERALL  
BAR  
LENGTH **45<sup>CM</sup>**

**550ml**  
FUEL TANK



Now you have purchased a Gardenline® product you can rest assured in the knowledge that as well as your 3 year parts and labour warranty you have the added peace of mind of dedicated helplines and web support

## AFTER SALES SUPPORT

UK / N.IRELAND HELPLINE NO 0151 649 1500  
REP IRELAND HELPLINE NO 1890 946 6244  
AFTER SALES SUPPORT [www.einhell-uk.co.uk](http://www.einhell-uk.co.uk)

MODEL NUMBER: 5336  
MONTH ON SALE: 09/2009 (36)

THIS BOX INCLUDES:  
1 x CHAIN SAW UNIT • 1 x CHAIN  
1 x 2 STROKE OIL • 1 x SPANNER  
1 x SOFT CARRY BAG

# THE POWER GUIDE

# Contents

---

- 03 Introduction
- 04 General Information & Safety Instructions
- 12 Assembly and Parts List
- 17 Getting Started
- 20 Features
- 21 Instructions
- 38 Other Useful Information
- 41 Warranty Card

## Packaging

The unit is supplied in packaging to prevent its contents being damaged in transit. This packaging is raw material and can therefore be reused or can be returned to the raw material system.

Helpline No. UK/Northern Ireland 0151 6491500 Rep. Ireland 1890 946244

Web Support [www.einhell-uk.co.uk](http://www.einhell-uk.co.uk)

Model Number: 5336

# Introduction

# 1

Congratulations on choosing to buy a Gardenline® product. By doing so you now have the assurance and peace of mind that comes with purchasing a product made by one of Europe's leading manufacturers.

All products brought to you by Gardenline® are manufactured to the highest standards of performance and safety, and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 3 Year Warranty.

Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as fast as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.

Please fill in and return the Warranty Card to the address provided.

We hope you will enjoy using your purchase for many years to come.

# General Information & Safety Instructions

## 2

When using the equipment, a few safety precautions must be observed to avoid injuries and damage.

- 1 Read the operating instructions carefully and comply with them at all times. It is important to consult these instructions in order to acquaint yourself with the unit, its proper use and the important safety regulations.
- 2 Keep this manual in a safe place, so that the information is available at all times.
- 3 If you give the equipment to any other person, make sure that you pass on these operating instructions as well.

We can accept no liability for damage or accidents which arise due to non-compliance with these instructions.



### General safety regulations

#### Explanation of the symbols and warning signs on the machine

- 1 Read the user manual before using the machine.
- 2 On all jobs performed with the saw you must always wear safety goggles to guard your eyes from flying materials/objects and a sound-proof helmet, ear plugs or the like to protect your hearing. Wear a safety helmet if there is a risk of objects falling on you from above.

- 3 Important! Wear gloves to protect your hands.
- 4 Wear safety shoes to protect your feet.
- 5 Warning! Danger!
- 6 Make sure that the chain brake is released.  
Pull back the handle/chain brake before operating.
- 7 Noise emission complies with Directive 2000/14/EC!

### Explanation of the pictograms for handling on the machine

A safety sign is fitted to the chain saw's fan filter cover.

This label, along with the safety instructions on these pages, should be carefully read before attempting to operate this unit.

Important: Picture 1/2/3 Warns about a dangerous method of working that must not be used. Picture 4 Recommends operation for safe sawing.

### Important:

- 1 Beware of recoil.
- 2 Do not hold the saw in one hand.
- 3 Avoid contact with the tip of the rail (chain return point). RECOMMENDED.
- 4 **Important:** Hold the saw firmly with both hands. Place your right hand on the rear handle and your left hand on the front handle.



### Kickback safety precautions

**Warning:** Kickback can lead to dangerous loss of control of the chain saw and result in serious or fatal injury to the saw operator or to anyone standing close by. Always be alert. Rotational kickback and pinch-kickback are major chain saw operational dangers and the leading cause of most accidents.

KICKBACK may occur when the NOSE or TIP of the guide bar touches an object, or when wood closes in and pinches the saw chain in the cut. Tip contact in some cases may cause a lightning-fast reverse reaction, kicking the guide bar up and back toward the operator.

PINCHING the saw chain along the BOTTOM of the guide bar may PULL the saw forward away from the operator. PINCHING the saw chain along the TOP of the guide bar may PUSH the guide bar rapidly back toward the operator.

Any of these reactions may cause you to lose control of the saw, which could result in serious personal injury.



### Beware of the following: Rotary recoil (Fig. 1)

A = Recoil distance  
B = Recoil reaction zone

### Impact/Jamming recoil and pulling reactions (Fig. 2)

A = Pull  
B = Solid objects  
C = Push

To prevent pulling reactions, place the wood you wish to cut against the claw stop. Use the claw stop as a pivot point during cutting (Fig. 2).

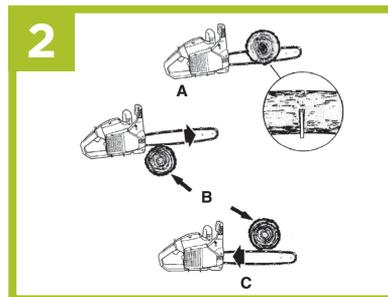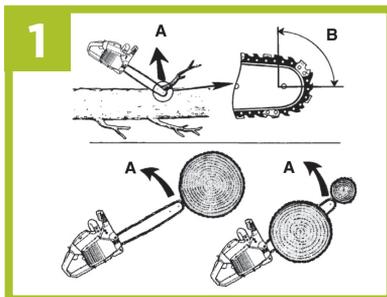

## Safety Instructions

**Warning:** When using petrol tools, basic safety precautions, including the following, should always be followed to reduce the risk of serious personal injury and/or damage to the unit.

Read all these instructions before operating this product and save these instructions.

- 1 DO NOT operate a chain saw with one hand! Serious injury to the operator, helpers, bystanders, or any combination of these persons may result from one-handed operation. A chainsaw is intended for two-handed use.
- 2 Do NOT use the saw if you are tired, ill or under the influence of alcohol and/or drugs.
- 3 Use safety footwear, snug-fitting clothing, protective gloves, and eye, hearing and head protection devices.
- 4 Use caution when handling fuel. Move the chainsaw at least 10 feet (3m) from the fueling point before starting the engine.
- 5 DO NOT allow other persons to be near when starting or cutting with the chain saw. Keep bystanders and animals out of the work area.
- 6 DO NOT start cutting until you have a clear work area, secure footing, and a planned retreat path from the falling tree.
- 7 Keep all parts of your body away from the saw chain when the engine is running.
- 8 Before you start the engine, make sure that the saw chain is not contacting anything.
- 9 Carry the chain saw with the engine stopped, the guide bar and saw chain to the rear, and the exhaust away from your body.
- 10 NEVER use a chainsaw which is damaged, incorrectly set or incompletely and loosely assembled. Make sure that the chainsaw stops when the chain brake is applied.
- 11 Shut off the engine before setting the chain saw down.

- 12 Use extreme caution when cutting small size brush and saplings because slender material may catch the saw chain and be whipped toward you or pull you off balance.
- 13 When cutting a limb that is under tension, be alert for springback so that you will not be struck when the tension in the wood fibers is released.
- 14 Keep the handles dry, clean, and free of oil or fuel mixture.
- 15 Operate the chain saw only in well-ventilated areas.
- 16 DO NOT operate a chain saw in a tree unless you have been specifically trained to do so.
- 17 All chain saw service, other than the items listed in the user manual safety and maintenance instructions, should be performed by competent chain saw service personnel.
- 18 When transporting your chain saw, use the appropriate guide bar scabbard.
- 19 DO NOT operate your chain saw near or around flammable liquids or gases whether in or out of doors. An explosion and/or fire may result.
- 20 Do not fill fuel tank, oil or lubricate when the engine of chain saw is running.
- 21 USE THE RIGHT TOOL: Cut wood only. Do not use the chain saw for purposes for which it was not intended. For example, do not use the chain saw for cutting plastic, masonry, or non building materials.
- 22 The engine will create toxic exhaust fumes as soon as the engine is started. Never work in enclosed rooms or in rooms with poor ventilation.

**Note:** The chainsaw is designed for occasional use by home owners, garden owners and campers and is for general work such as stump grubbing, cutting firewood, etc. It is not designed for lengthy use. If it is used for a lengthy period, the vibrations it causes in the hands of the user may result in circulation problems (white finger syndrome).

## **Kickback**


Kickback may occur when the nose or tip of the guide bar touches an object, or when the wood closes in and pinches the saw chain in the cut. If the bar tip contacts, it may cause a lightning-fast reverse reaction, kicking the guide bar up and back towards the operator. Pinching the saw chain along the top of the guide bar may push the guide bar rapidly back towards the operator. Either of these reactions may cause you to lose control of the saw, which could result in serious personal injury. Do not rely exclusively upon the safety devices built into your saw. As a chain saw user, you should take several steps to keep your cutting jobs free from accident or injury.

- 1 With a basic understanding of kickback, you can reduce or eliminate the element of surprise. Sudden surprise contributes to accidents.
- 2 Keep a good firm grip on the saw with both hands, the right hand on the rear handle, and the left hand on the front handle, when the engine is running. Use a firm grip with thumbs and fingers encircling the chain saw handles. A firm grip will help you reduce kickback and maintain control of the saw. Don't let go.
- 3 Make sure that the area in which you are cutting is free from obstructions. Do not let the nose of the guide bar contact a log, branch, or any other obstruction which could be hit while you are operating the saw.
- 4 Cut at high engine speeds.
- 5 Do not overreach or cut above shoulder height.
- 6 Follow manufacturer's sharpening and maintenance instructions for the saw chain.
- 7 Only use replacement bars and chains specified by the manufacturer or the equivalent.

## Safety features (Fig. 3)

- 2 LOW KICKBACK SAW CHAIN helps significantly reduce kickback, or the intensity of kickback, due to specially designed depth gauges and guard links.
- 5 CHAIN BRAKE LEVER / HAND GUARD protects the operator's left hand in the event it slips off the front handle while saw is running.
- 5 CHAIN BRAKE is a safety feature designed to reduce the possibility of injury due to kickback by stopping a moving saw chain in milliseconds. It is activated by the CHAIN BRAKE lever.
- 10 STOP SWITCH immediately stops the engine when tripped. Stop switch must be pushed to "On (1)" position to start or restart engine.
- 11 SAFETY TRIGGER prevents accidental acceleration of the engine. Throttle trigger (19) cannot be squeezed unless the safety latch is depressed.
- 20 CHAIN CATCHER reduces the danger of injury in the event saw chain breaks or derails during operation. The chain catcher is designed to intercept a whipping chain.

**Note:** Study your saw and be familiar with its parts.

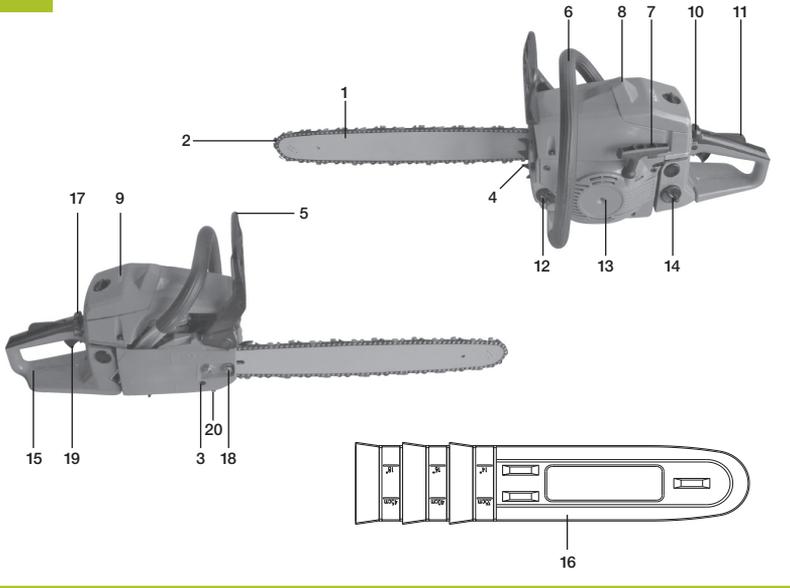**3**

### Proper use

The chain is designed exclusively for sawing wood. You may only fell trees if you have received the appropriate training. The manufacturer cannot be held liable for damage caused by improper or incorrect usage.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

### Environmental protection

Dispose of soiled maintenance material and operating materials at the appropriate collection point. Recycle packaging material, metal and plastics.

# Assembly & Parts List

# 3

## Layout (Fig.3)

- |    |  |    |                            |
|----|--|----|----------------------------|
| 1  | Chain bar                                  | 11 | Safety lock                |
| 2  | Saw chain                                  | 12 | Oil tank cap               |
| 3  | Chain tensioning screw                     | 13 | Fan housing                |
| 4  | Stop claw                                  | 14 | Fuel tank cap              |
| 5  | Chain brake lever/<br>front hand guard     | 15 | Rear handle/bootstrap      |
| 6  | Front handle                               | 16 | Chain guard                |
| 7  | Starter handle                             | 17 | Choke/(carburetor setting) |
| 8  | Spark plug<br>(under the air filter cover) | 18 | Bar fastening nut          |
| 9  | Air filter cover                           | 19 | Throttle lever             |
| 10 | Stop switch                                | 20 | Chain catch                |

## Installation

**Important:** Do not start the engine until the saw is fully assembled.



**Important:** Wear protective gloves at all times when handling the chain.





**Please note that the Chain brake lever/front handle guard (Fig. 6.) is supplied separately in the box.**

### Fit the chain bar

To ensure that the bar and the chain are supplied with oil, USE ONLY THE ORIGINAL BAR. The oiling hole (Fig. 4/Item A) must be kept clear of dirt and any build-up of residue.

- 1 Make sure the Chain brake lever is pulled back into the DISENGAGED position (Fig. 5/ Fig 6).
- 2 Remove the two bar fastening nuts (B) from the main unit (Fig 7).
- 3 Fit the open end of the chain bar over the die bar pins (F) (Fig. 8).

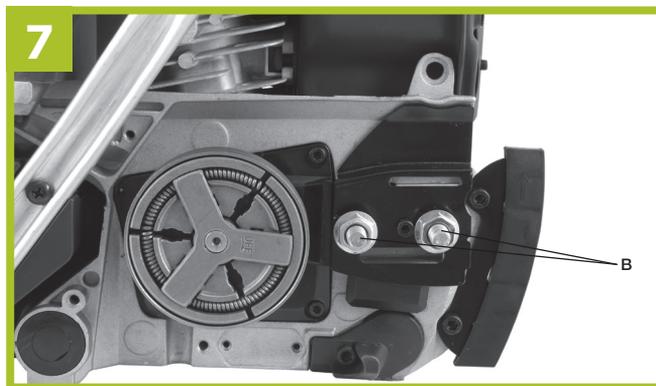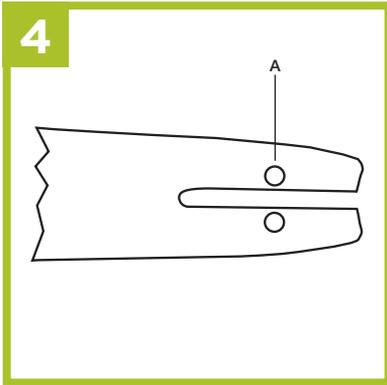

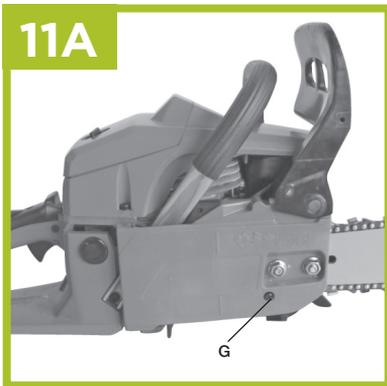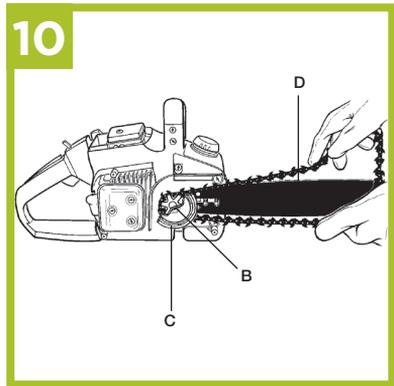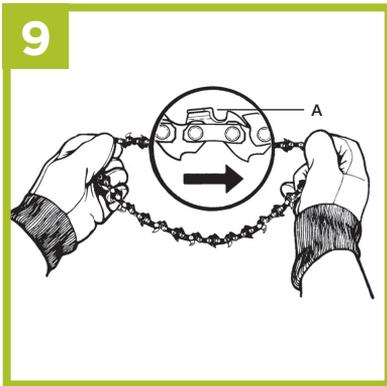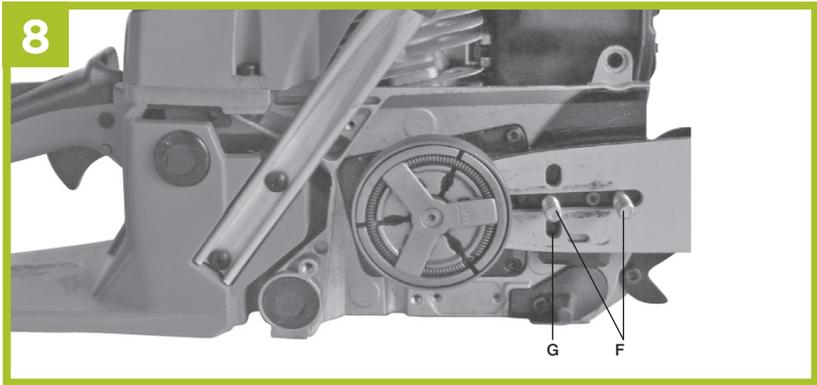

### To install saw chain

- 1 Spread the chain out in a loop with the cutting edges (A) pointing CLOCKWISE around loop (Fig. 9).
- 2 Slip the chain around the sprocket (B) behind the clutch (C). Make sure the links fit between the sprocket teeth (Fig. 10).
- 3 Guide the drive links into the groove (D) and around the end of the bar (Fig. 10).

**Note:** The saw chain may droop slightly on the lower part of bar. This is normal.

- 4 Pull the chain bar forward until the chain is closely seated. Make sure that all the drive links are in the groove of the bar.
- 5 Using a screwdriver, run the adjustment screw (Fig 11A/Item G and Fig. 11B/Item G) COUNTERCLOCKWISE until the TANG (Fig. 6/Item E) (projecting prong) is to the end of its travel toward the circular brake band (Fig. 6).
- 6 Fit the Chain brake lever/front handle guard by aligning the tang with the slot in the chain bar (re-adjust the tang position if it does not line up correctly). Make sure that the pivot (Fig. 6/Item E) fits into the chain bar (Fig. 8/Item G). Make sure that the rubber strip (Fig 6/item H) is flat and does not get caught on the engine wall during assembly. The chain must not slip off the bar when you do this. Fit the two nuts (Fig. 7/Item B) and tighten them by hand and then follow the instructions for adjusting the tension in ADJUSTING THE CHAIN TENSION.

### Saw chain tension adjustment

Proper tension of the saw chain is extremely important and must be checked before starting, as well as during any cutting operation. Taking the time to make needed adjustments to the saw chain will result in improved cutting performance and prolonged chain life.


**Warning:** Always wear heavy duty gloves when handling saw chain or making saw chain adjustments.

- 1 Before adjusting the chain tension screw you must slacken the 2x retaining nuts. Otherwise this will damage the tension screw.
- 2 Hold nose of guide bar up and turn adjustment screw (D) CLOCKWISE to increase chain tension. Turning screw COUNTERCLOCKWISE will decrease amount of tension on chain. Ensure the chain fits snugly all the way around the guide bar (Fig. 10).

- 3 After making adjustment, and while still holding nose of bar in the uppermost position, tighten the bar retaining nuts securely. Chain has proper tension when it has a snug fit all around and can be pulled around by gloved hand.  
**Note:** If chain is difficult to rotate on guide bar or if it binds, too much tension has been applied. This requires minor adjustment as follows:
- 4 Loosen the bar retaining nut so they are finger tight. Decrease tension by turning the bar adjustment screw COUNTERCLOCKWISE slowly. Move chain back and forth on bar. Continue to adjust until chain rotates freely, but fits snugly. Increase tension by turning bar adjustment screw CLOCKWISE.
- 5 When saw chain has proper tension, hold nose of bar in the uppermost position and tighten the bar retaining nut securely.

**Caution:** A new saw chain stretches, requiring adjustment after as few as 5 cuts. This is normal with a new chain, and the interval between future adjustments will lengthen quickly.

**Caution:** If the saw chain is TOO LOOSE or TOO TAUT, the drive wheel, chain bar, chain and crank shaft bearing will suffer premature wear. Fig. 12 shows the correct tension A (when cold) and tension B (when warm). Fig. C shows a chain that is too loose.

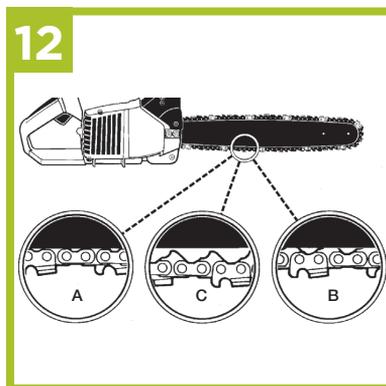

# Getting Started

# 4

## Before starting the machine



### Chain brake mechanical test

Your chain saw is equipped with a Chain brake that reduces possibility of injury due to kickback. The brake is activated if pressure is applied against brake lever when, as in the event of kickback, operator's hand strikes the lever. When the brake is actuated, chain movement stops abruptly.

**Warning:** The purpose of the chain brake is to reduce the possibility of injury due to kickback; however, it cannot provide the intended measure of protection if the saw is operated carelessly. Always test the chain brake before using your saw and periodically while on the job.

### To test chain brake

- 1 The Chain brake is DISENGAGED (chain can move) when BRAKE LEVER IS PULLED BACK AND LOCKED (Fig. 13).
- 2 The chain brake is ENGAGED (the chain is locked) when the brake lever is pulled forward and the mechanism (Fig. 14/Item A) can be seen. It should not be possible to move the chain (Fig. 14).

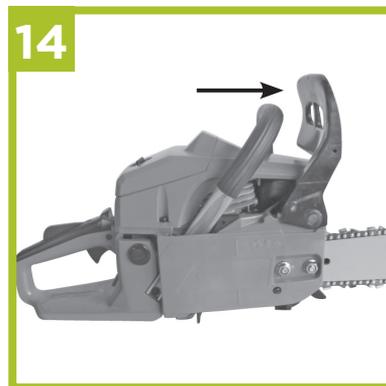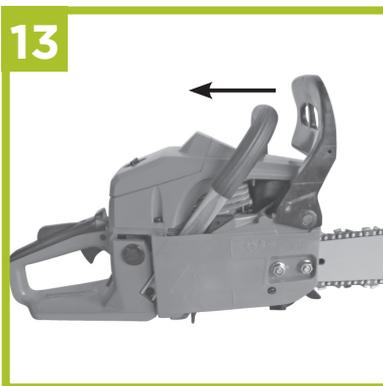

**Note:** The brake lever should snap into both positions. If strong resistance is felt, or lever does not move into either position, do not use your saw. Take it immediately to a professional Service Center for repair.

## Fuel and lubrication

### Fuel

Use regular grade unleaded fuel mixed with 25:1 custom 2-cycle engine oil for best results.

### Mixing fuel

Mix fuel with 2 cycle oil in an approved container. Shake gently and ensure thorough mix.

**Warning:** Never use straight fuel in your unit. This will cause permanent engine damage and void the manufacturer's warranty for that product. Never use a fuel mixture that has been stored for over 90 days.

**Warning:** If 2-cycle lubricant is to be used, it must be a premium grade oil for 2-cycle air cooled engines mixed at a 25:1 ratio. Do not use any 2-cycle oil product with a recommended mixing ratio of 100:1. If insufficient lubrication is the cause of engine damage, it voids the manufacturer's engine warranty for that occurrence.



### Recommended fuels

Some conventional fuels are being blended with oxygenates such as alcohol or an ether compound to meet clean air standards. Your engine is designed to operate satisfactorily on any fuel intended for automotive use including oxygenated fuel. It is recommended to use unleaded petrol as fuel.

### Lubrication of chain and chain bar


Whenever you refill the fuel tank with petrol you must also top up the level of chain oil in the chain oil tank. It is recommended to use standard chain oil.

### Engine pre-start checks

**Warning:** Never start or operate the saw unless the bar and chain are properly installed.

- 1 Fill the fuel tank (A) with correct fuel mixture (Fig. 15).
- 2 Fill the oil tank (B) with chain oil (Fig. 15).
- 3 Be certain the chain brake is disengaged (C) before starting unit (Fig. 15).

Once you have filled the chain and oil tank, tighten the tank cover securely by hand. Do not use any tools to do so.

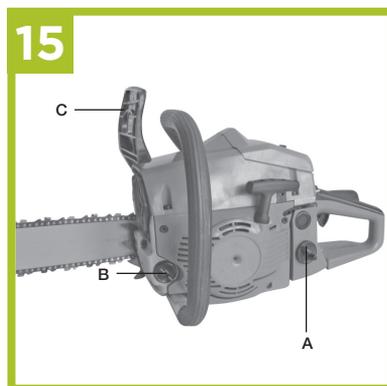

# Features

# 5

- 45cm cutting length
- Automatic choke & primer assisting start up
- 21m/s chain speed
- 550ml fuel tank capacity
- Mixer bottle included
- Soft carry bag included

# Instructions

# 6

## Operation

### Starting the engine

- 1 Set the On/Off switch (A) (Fig. 16) to “Off (0)” to stop the machine.
- 2 Pull out the choke lever (B) (Fig. 17) until it locks.
- 3 Place the saw on a firm, flat surface. Hold the saw firmly as shown. Pull starter rapidly 4 times. Beware of the moving chain! (Fig. 19).
- 4 Push in the choke lever (B) as far as it will go (Fig. 17).
- 5 Set the On/Off switch (A) to “On (I)” to start the machine
- 6 Hold saw firmly and pull starter rapidly 6 times. Engine should start (Fig. 18).
- 7 Let the engine run for 10 seconds to warm up. Press the throttle lever (D) briefly, the engine will go to “idling” speed (Fig. 19). If engine failed to start, repeat these instructions.



**Important:** Always pull the starter cable slowly until you feel the initial resistance before you then pull it quickly to start the engine. Do not allow the starter cable to whip back of its own accord.

### Restarting a warm engine

- 1 Make sure the switch is in the “On (I)” position.
- 2 Pull the starter rope rapidly 6 times. The engine should start.

### To stop engine

- 1 Release trigger and allow engine to return to idle speed.
- 2 Move STOP switch down to stop engine.

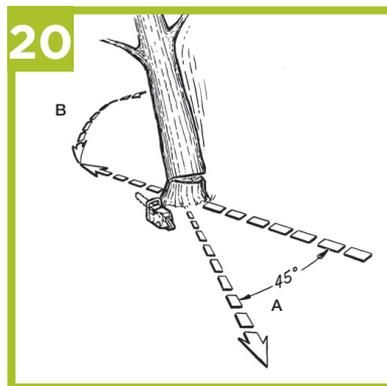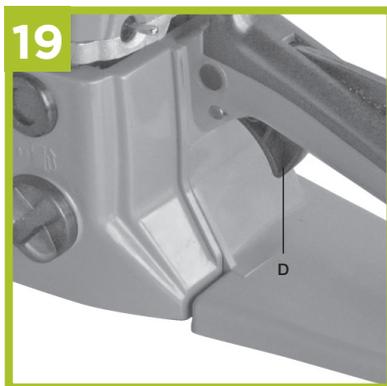

**Note:** To stop the engine in an emergency, activate the chain brake and switch the ON/OFF switch to “Stop (O)”.

### **General cutting instructions**

**Important:** Felling trees is prohibited without the necessary training!

#### **Felling**

Felling is the term for cutting down a tree. Small trees up to 6-7 inches (15-18cm) in diameter are usually cut in a single cut. Larger trees require notch cuts. Notch cuts determine the direction the tree will fall.

**Warning:** A retreat path (A) should be planned and cleared as necessary before cuts are started. The retreat path should extend back and diagonally to the rear of the expected line of fall, as illustrated in Fig. 20.

**Warning:** If felling a tree on sloping ground, the chain saw operator should keep on the uphill side of the terrain, as the tree is likely to roll or slide downhill after it is felled.

**Note:** Direction of fall (B) is controlled by the notching cut. Before any cuts are made, consider the location of larger branches and natural lean of the tree to determine the way the tree will fall (Fig. 20).

**Warning:** Do not cut down a tree during high or changing winds or if there is a danger to property. Consult a tree professional. Do not cut down a tree if there is a danger of striking utility wires; notify the utility company before making any cuts.

### **General guidelines for felling trees (Fig. 21)**

Normally felling consists of 2 main cutting operations, notching (C) and making the felling cut (D). Start making the upper notch cut (C) on the side of the tree facing the felling direction (E). Be sure you don't make the lower cut too deep into the trunk. The notch (C) should be deep enough to create a hinge (F) of sufficient width and strength. The notch should be wide enough to direct the fall of the tree for as long as possible.

**Warning:** Never walk in front of a tree that has been notched. Make the felling cut (D) from the other side of the tree and 1.5 - 2.0 inches (3-5 cm) above the edge of the notch (C). Never saw completely through the trunk. Always leave a hinge. The hinge guides the tree. If the trunk is completely cut through, control over the felling direction is lost.

Insert a wedge or felling lever in the cut well before the tree becomes unstable and starts to move. This will prevent the guidebar from binding in the felling cut if you have misjudged the falling direction. Make sure no bystanders have entered the range of the falling tree before you push it over.

**Warning:** Before making the final cut, always recheck the area for bystanders, animals or obstacles.

### **Felling cut**




- 1 Use wooden or plastic wedges (A) to prevent binding the bar or chain (B) in the cut. Wedges also control felling (Fig. 22).
- 2 When diameter of wood being cut is greater than the bar length, make 2 cuts as shown (Fig. 23).

**Warning:** As the felling cut gets close to the hinge, the tree should begin to fall. When tree begins to fall, remove saw from cut, stop engine, put chain saw down, and leave area along retreat path (Fig. 20).

## Limbing

Limbing a tree is the process of removing the branches from a fallen tree. Do not remove supporting limbs (A) until after the log is bucked (cut) into lengths (Fig. 24). Branches under tension should be cut from the bottom up to avoid binding the chain saw.

**Warning:** Never cut tree limbs while standing on tree trunk.

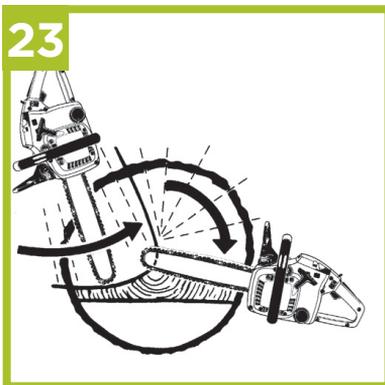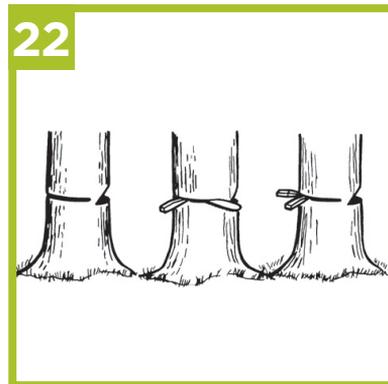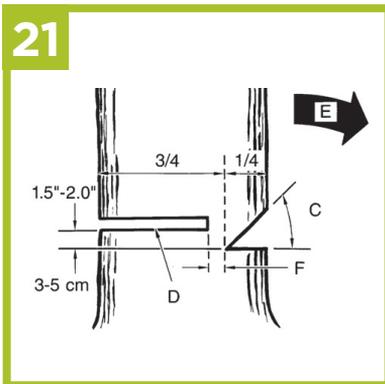

## Bucking

Bucking is cutting a fallen log into lengths. Make sure you have a good footing and stand uphill of the log when cutting on sloping ground. If possible, the log should be supported so that the end to be cut off is not resting on the ground. If the log is supported at both ends and you must cut in the middle, make a downward cut halfway through the log and then make the undercut. This will prevent the log from pinching the bar and chain. Be careful that the chain does not cut into the ground when bucking as this causes rapid dulling of the chain. When bucking on a slope, always stand on the uphill side.

- 1 **Log supported along entire length:** Cut from top (overbuck), being careful to avoid cutting into the ground (Fig. 25).
- 2 **Log supported on 1 end:** First, cut from bottom (underbuck) 1/3 diameter of log to avoid splintering. Second, cut from above (overbuck) to meet first cut and avoid pinching (Fig. 26).
- 3 **Log supported on both ends:** First, overbuck 1/3 diameter of log to avoid splintering. Second, underbuck to meet first cut and avoid pinching (Fig. 27).

**Note:** The best way to hold a log while bucking is to use a sawhorse. When this is not possible, the log should be raised and supported by the limb stumps or by using supporting logs. Be sure the log being cut is securely supported.


### Bucking using a sawhorse (Fig. 28)

For personal safety and ease of cutting, the correct position for vertical bucking is essential (Fig. 28).


- 1 Hold the saw firmly with both hands and keep the saw to the right of your body while cutting.
- 2 Keep the left arm as straight as possible.
- 3 Keep weight on both feet.

**Caution:** When working with the saw, always make sure that the saw chain and chain bar are sufficiently lubricated.


25

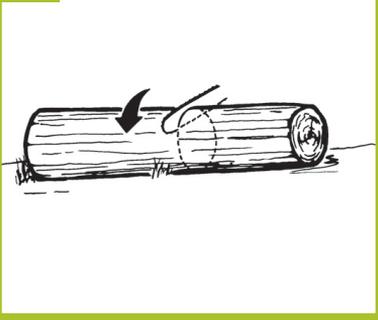

26

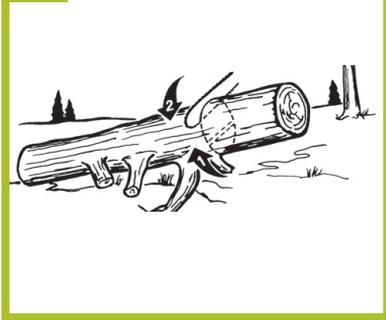

27

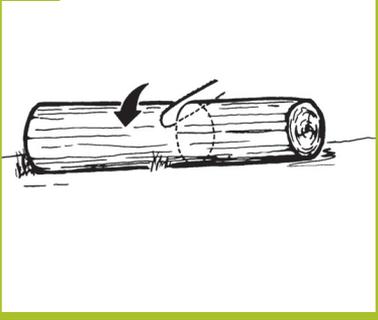

28



## Maintenance

**Warning:** All maintenance work on the chainsaw apart from the work described in this manual may only be carried out by authorised after-sales service personnel.

### Chain brake operational test

Test the chain brake periodically to ensure proper function.

Perform a chain brake test prior to initial cutting, following extensive cutting, and definitely following any Chain brake service.

Test chain brake as follows (Fig. 29):

- 1 Place saw on a clear, firm, flat surface.
- 2 Start engine.
- 3 Grasp the rear handle (A) with your right hand.
- 4 With your left hand, hold the front handle (B) [not chain brake lever (C)] firmly.
- 5 Squeeze the throttle trigger to 1/3 throttle, then immediately activate the chain brake lever (C).

**Warning:** Activate the chain brake slowly and deliberately. Keep the chain from touching anything; don't let the saw tip forward.

- 6 Chain should stop abruptly. When it does, immediately release the throttle trigger.

**Warning:** If chain does not stop, turn engine off and take your unit to the nearest Gardenline Authorized Service Centre for service.

- 7 If chain brake functions properly, turn the engine off and return the chain brake to the DISENGAGED position.

### Air filter

**Warning:** Never operate saw without the air filter. Dust and dirt will be drawn into engine and damage it. Keep the air filter clean! The air filter must be cleaned or replaced after every 20 hours of service.

### Cleaning the air filter (Fig. 30/31)

- 1 Remove the top cover (A) by undoing the cover fastening screw (B) on the cover. You can then remove the cover (Fig. 31).
- 2 Lift out the air filter (C) (Fig. 32).

- 3 Clean air filter. Wash filter in clean, warm, soapy water. Rinse in clear, cool water. Air dry completely.

**Note:** It is advisable to have a supply of spare filters.

- 4 Insert the air filter. Fit the cover for the engine/air filter. Make sure that the cover fits perfectly when you do so. Tighten the fastening screw for the cover.

### Fuel filter

**Warning:** Never use the saw without a fuel filter. After 100 hours in operation the fuel filter should be cleaned or, in case of damage, replaced. Be sure to empty the fuel tank before changing the filter.

- 1 Remove the fuel tank cap.
- 2 Bend a piece of soft wire.
- 3 Reach into fuel tank opening and hook fuel line. Carefully pull the fuel line toward the opening until you can reach it with your fingers.





**Note:** Do not pull hose completely out of tank.

- 4 Lift filter (A) out of tank (Fig. 33).
- 5 Pull off the filter with a twist and clean it; if the filter is damaged, dispose of it.
- 6 Insert a new filter. Place one end of the filter into the tank opening. Make sure that the filter is seated in the lower corner of the tank. If necessary, use a long screwdriver to move the filter to its correct position, taking care not to damage in the process.
- 7 Fill tank with fresh fuel/oil mixture. See Section Fuel and Lubrication. Install fuel cap.

### Spark plug (Fig. 32)

**Warning:** To ensure that the saw's engine retains its power, the spark plug must be clean and have the correct electrode gap (0.6 mm). The spark plug must be cleaned or replaced after every 20 hours of service.

- 1 Set the On/Off switch to "Stop (O)".
- 2 Remove the top cover (A) by undoing the cover fastening screw (B) on the cover. You can then remove the filter (C) (Fig. 31).

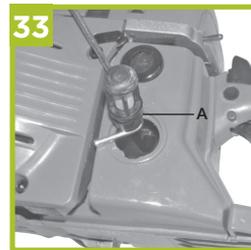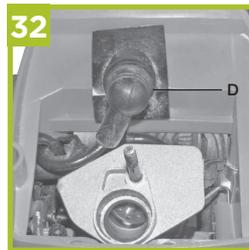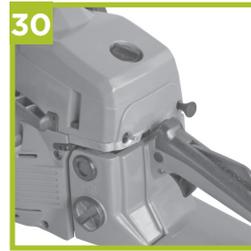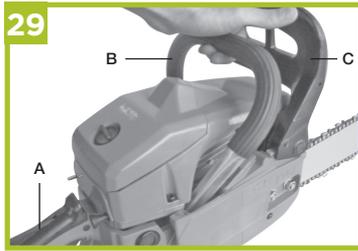

- 3 Disconnect the ignition cable (D) from the spark plug by pulling and twisting it simultaneously (Fig. 32).
- 4 Remove the spark plug using a spark plug wrench. DO NOT USE ANY OTHER TOOLS.
- 5 Clean the spark plug with a copper wire brush or fit a new one.

### Carburettor setting

The carburettor has been set to its perfect adjustment at the factory. If it requires adjusting, take the saw to your nearest authorised after-sales service outlet.

### Chain bar maintenance

Regular lubrication of the chain bar (guide rail for the chain and teeth) is essential. The chain bar needs the maintenance described in the following section in order for the saw to work at an optimum level of performance.

**Caution:** The sprocket tip on your new saw has been pre-lubricated at the factory. Failure to lubricate the guide bar sprocket tip as explained below will result in poor performance and seizure, voiding the manufacturer's warranty.

### **Tools for lubrication**

The Lube Gun is recommended for applying grease to the guide bar sprocket tip. The Lube Gun is equipped with a needle nose tip which is necessary for the efficient application of grease to the sprocket tip.

### **To lubricate sprocket tip**

Lubrication of the sprocket tip is recommended after 10 hours of use or once a week, whichever occurs first. Always thoroughly clean guide bar sprocket tip before lubrication.

**Note:** The saw chain does not have to be removed in order to lubricate the teeth of the chain bar. Lubrication is possible during work, with the engine switched off.

**Warning:** Wear heavy duty work gloves when handling the bar and chain.




- 1 Set the On/Off switch to "Stop (0)".
- 2 Clean the guide bar sprocket tip.
- 3 Using the Lube Gun (optional), insert needle nose into the lubrication hole and inject grease until it appears at outside edge of sprocket tip (Fig .34).
- 4 Rotate saw chain by hand. Repeat lubrication procedure until the entire sprocket tip has been greased.

Most guide bar problems can be prevented merely by keeping the chain saw well maintained.

Insufficient guide bar lubrication and operating the saw with chain that is TOO TIGHT will contribute to rapid bar wear.

To help minimise bar wear, the following guide bar maintenance procedures are recommended.

**Warning:** Always wear protective gloves during maintenance operations. Do not carry out maintenance when the engine is hot.

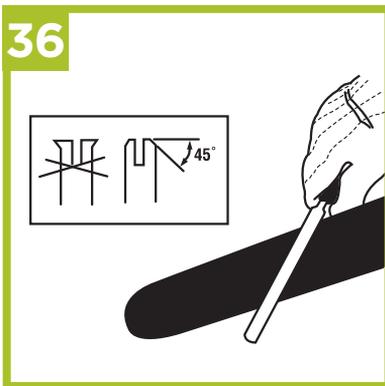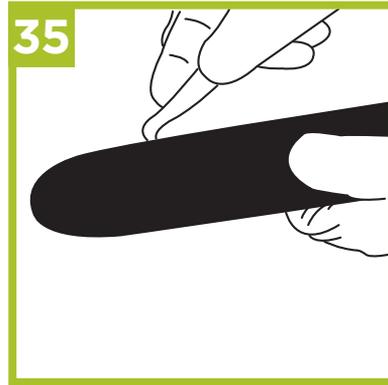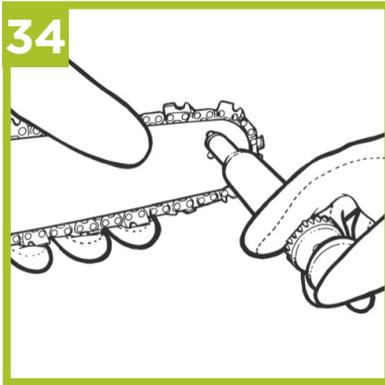

### Turning the chain bar

The bar should be reversed every 8 working hours to ensure uniform wear. Keep the bar groove and lubrication hole clean using the bar groove cleaner supplied optional. (Fig. 35)  
Check the bar rails frequently for wear and, if necessary, remove the burrs and square-up the rails using the flat file. (Fig. 36)

**Warning:** Never fit a new chain to a worn chain bar.

### Oil passages

Oil passages on the bar should be cleaned to ensure proper lubrication of the bar and chain during operation.

**Note:** The condition of the oil passages can be easily checked. If the passages are clear, the chain will automatically give off a spray of oil within seconds of starting the saw. Your saw is equipped with an automatic oiler system.

### **Automatic chain lubrication**

The chain saw is equipped with an automatic oil lubrication system with a toothed wheel drive. It automatically supplies the bar and the chain with the right quantity of oil. The moment the engine is accelerated, the oil also starts to flow through the bar plate more quickly as well.

The chain lubrication system has been set to its perfect adjustment at the factory. If it requires adjusting, take the saw to your nearest authorized after-sales service outlet.

A setting screw for adjusting the chain lubrication (Fig. 37/ Item A) is located on the underside of the chain saw. Turning the screw counter-clockwise increases the chain lubrication, turning it clockwise decreases the chain lubrication.

To check the chain lubrication, hold the chain saw, with the chain, over a piece of paper and run it at full speed for a few seconds. You will be able to judge the set amount of oil from the paper.

### **Chain maintenance**

#### **Chain sharpening**




Chain sharpening requires special tools to ensure that cutters are sharpened at the correct angle and depth. For the inexperienced chain saw user, we recommend that the saw chain be professionally sharpened by the nearest professional Service Centre. If you feel comfortable sharpening your own saw chain, special tools are available from the professional Service Centre.

Service Centre. If you feel comfortable sharpening your own saw chain, special tools are available from the professional Service Centre.

#### **Chain sharpening (Fig. 38)**

Sharpen the chain using protective gloves and a round file of  $\varnothing 3/16''$  (4.8mm).

Always sharpen the cutters only with outward strokes (Fig. 38) observing the values given in Fig. 39.

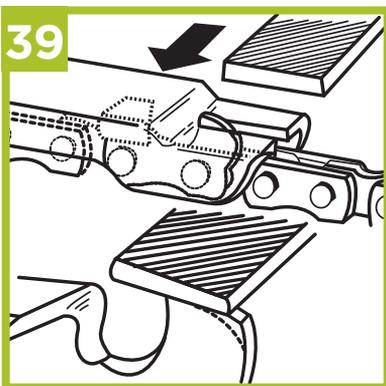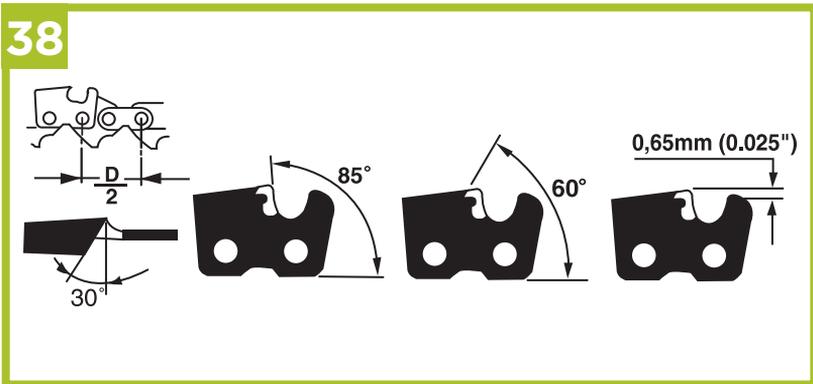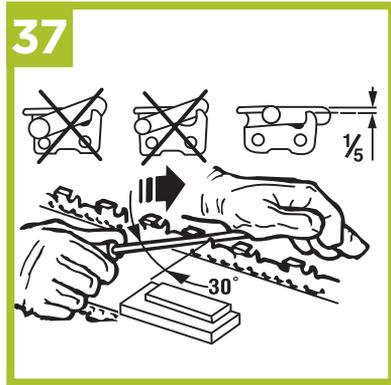

After sharpening, the cutting links must all have the same width and length.

**Warning:** A sharp chain produces well-defined chips. When your chain starts to produce sawdust, it is time to sharpen. After the blades have been sharpened 3-4 times, check the height of the depth limiter and if necessary lower it with a flat file and then round off the front corner (Fig. 40).

### **Chain tension**

Check the chain tension frequently and adjust as often as necessary to keep the chain snug on the bar, but loose enough to be pulled around by hand.

### **Breaking in a new saw chain**

A new chain and bar will need chain readjustment after as few as 5 cuts. This is normal during the break-in period, and the interval between future adjustments will begin to lengthen quickly.

**Warning:** Never have more than 3 links removed from a loop of chain. This could cause damage to the sprocket. If in doubt please call the customer helpline.

### **Chain lubrication**

Always make sure the automatic oiler system is working properly. Keep the oil tank filled with chain, bar and sprocket oil. Adequate lubrication of the bar and chain during cutting operations is essential to minimize friction with the guide bar. Never starve the bar and chain of lubricating oil. Running the saw dry or with too little oil will decrease cutting efficiency, shorten saw chain life, cause rapid dulling of chain, and lead to excessive wear of bar from overheating. Too little oil is evidenced by smoke or bar discoloration.

## **Ordering replacement parts**

Please quote the following data when ordering replacement parts:


- Type of machine
- Article number of the machine
- Identification number of the machine
- Replacement part number of the part required

### **Helpline Numbers:**

UK: 0151 649 1500

IRE: 1890 946244

## Petrol Engine Starting Procedure/Check List

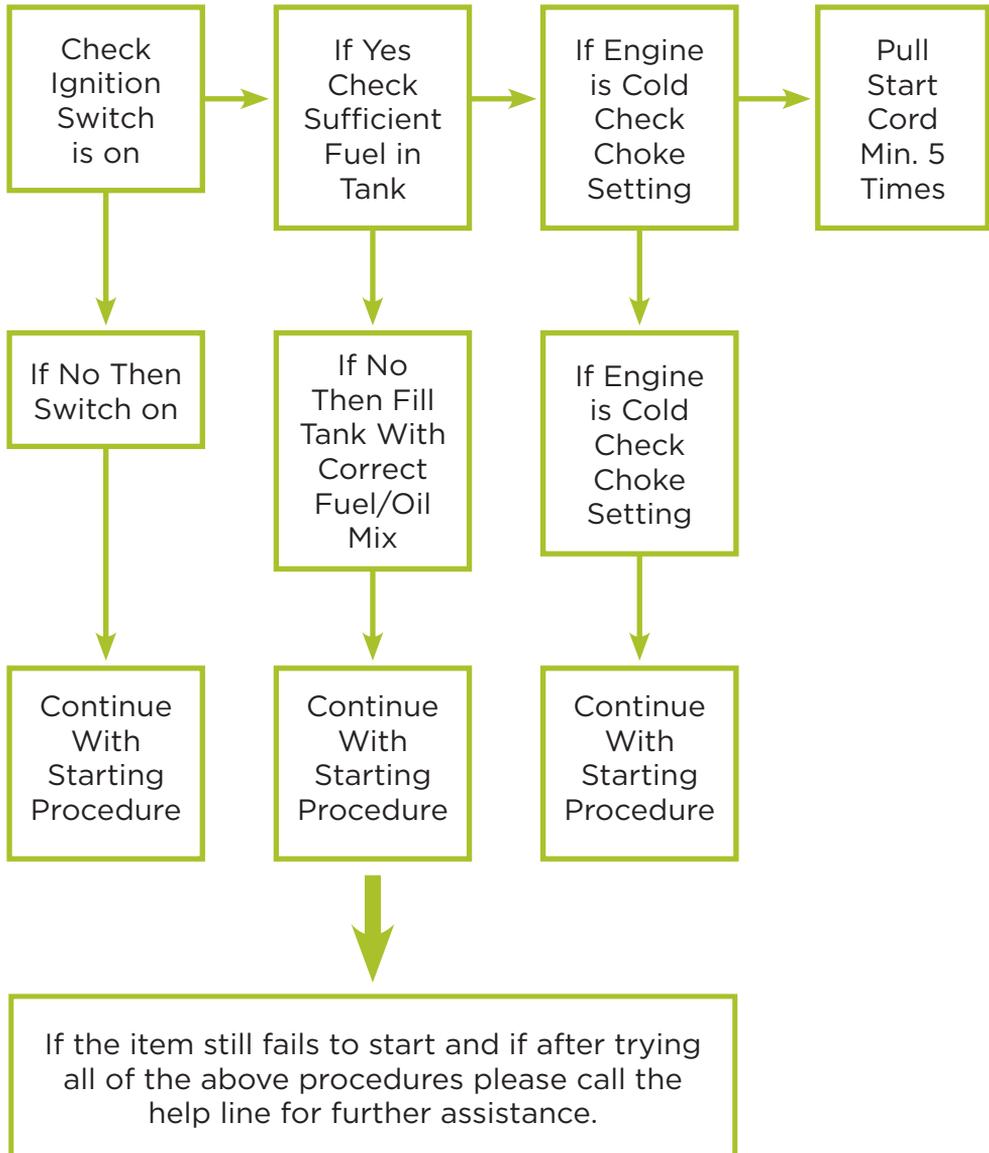

FAULT	POSSIBLE CAUSES	TROUBLESHOOTING
Unit won't start or starts but will not run	Incorrect starting procedures	Follow instructions in the User Guide or refer to starting procedure check list on page 37
	Incorrect carburetor mixture adjustment setting	Have carburetor adjusted by an Authorised Service Centre
	Fouled spark plug	Clean/gap or replace plug
	Fuel filter plugged	Replace fuel filter
	Chain brake is on	Put Chain brake in off position
Unit starts, but engine has low power	Incorrect lever position on choke	Move to RUN position
	Dirty air filter	Remove, clean and reinstall filter
	Incorrect carburetor mixture adjustment setting	Have carburetor adjusted by an Authorised Service Centre
Engine hesitates	Incorrect carburetor mixture adjustment setting	Have carburetor adjusted by an Authorised Service Centre
No power under load	Incorrectly gapped spark plug	Clean/gap or replace plug
Runs erratically	Incorrect carburetor mixture adjustment setting	Have carburetor adjusted by an Authorised Service Centre
Smokes excessively	Incorrect fuel mixture	Use properly mixed fuel (25:1 mix)
Poor performance when operated	Blunt chain	Sharpen or replace the chain
	Loose chain	Tension the chain
Engine dies	Empty petrol tank	Fill up the petrol tank
	Fuel filter in the wrong position in the tank	Completely fill the petrol tank or re-position the fuel filter in the petrol tank
Insufficient chain lubrication (the cutter rail and chain get hot)	Empty oil tank for the chain	Top up the oil tank for the chain
	Oil lubrication opening blocked	Clean the oil lubrication hole in the cutter bar (Fig 4/Item A) Clean the groove in the cutter bar

# Useful Information

# 8

## Technical data

Engine displacement	46 cm <sup>3</sup>
Maximum engine capacity	2 kW
Bar length	43 cm
Cutter rail length	(18") 45 cm
Chain pitch	(0.325"), 8.255 mm
Chain thickness	(0.0584"), 1.47 mm
Idling speed	3600 rpm
Maximum speed with cutting equipment	10000 rpm
Tank capacity	550 ml
Oil tank capacity	260 ml
Anti-vibration function	Yes
Chain wheel teeth	7 x 8.255 mm
Chain brake	Yes
Clutch	Yes
Automatic chain lubrication	Yes
Low-kickback chain	Yes
Net weight without chain and chain bar	5.5 kg
Net weight (dry)	7 kg
Fuel consumption (specific)	560 g / kWh
LpA sound pressure level	104 dB(A)
LWA sound power level	116 dB(A)
Vibration a <sup>hv</sup> (front handle)	max. 5.99 m/s <sup>2</sup>
Vibration a <sup>hv</sup> (rear handle)	max. 7.54 m/s <sup>2</sup>
Chain type	Carlton (K2L-BL, 72E)
Bar type	POH18-58SH
Spark plug	LDL7T

## Storage


**Caution:** Never put a chain saw into storage for longer than 30 days without carrying out the following steps.

### Storing a chain saw

Storing a chain saw for longer than 30 days requires storage maintenance. Unless the storage instructions are followed, fuel remaining in the carburettor will evaporate, leaving gum-like deposits. This could lead to difficult starting and result in costly repairs.

- 1 Remove the fuel tank cap slowly to release any pressure in tank. Carefully drain the fuel tank.
- 2 Start the engine and let it run until the unit stops to remove fuel from carburettor.
- 3 Allow the engine to cool (approx. 5 minutes).
- 4 Remove the spark plug.
- 5 Pour 1 teaspoon of clean 2-cycle oil into the combustion chamber. Pull starter rope slowly several times to coat internal components. Replace spark plug (Fig. 41).

**Note:** Store the unit in a dry place and away from possible sources of ignition such as a furnace, gas hot water heater, gas dryer, etc.

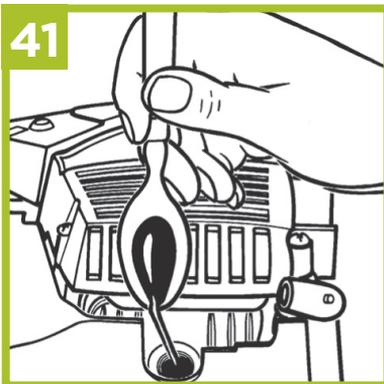

### Putting the saw back into operation

- 1 Remove spark plug.
- 2 Pull starter rope briskly to clear excess oil from combustion chamber.
- 3 Clean the spark plug and check that the electrode gap (approx 0.6mm) is correct.
- 4 Prepare unit for operation.
- 5 Fill fuel tank with proper fuel/oil mixture. See Fuel and Lubrication Section.

### Waste disposal

The equipment and its accessories are made of various types of material, such as metal and plastic. Defective components must be disposed of as special waste. Ask your dealer or your local council.



## Konformitätserklärung

- erklärt folgende Konformität gemäß EU-Richtlinie und Normen für Artikel  
 explains the following conformity according to EU directives and norms for the following product  
 déclare la conformité suivante selon la directive CE et les normes concernant l'article  
 dichiara la seguente conformità secondo la direttiva UE e le norme per l'articolo  
 verklaart de volgende overeenstemming conform EU richtlijn en normen voor het product  
 declara la siguiente conformidad a tenor de la directiva y normas de la UE para el artículo  
 declara a seguinte conformidade, de acordo com a directiva CE e normas para o artigo  
 atterer følgende overensstemmelse i medfør af EU-direktiv samt standarder for artikel  
 förklarar följande överensstämmelse enl. EU-direktiv och standarder för artikeln  
 vakuuttaa, että tuote täyttää EU-direktiivin ja standardien vaatimukset  
 tõendab toote vastavust EL direktiivile ja standarditele  
 vydává následující prohlášení o shodě podle směrnice EU a norem pro výrobek  
 potrjuje sledečo skladnost s smernico EU in standardi za izdelek  
 vydáva nasledujúce prehlásenie o zhode podľa smernice EÚ a noriem pre výrobok  
 a cikkekhez az EU-irányvonal és Normák szerint a következő konformitást jelenti ki  
 deklaruje zgodność wymienionego poniżej artykułu z następującymi normami na podstawie dyrektywy WE.  
 денларира съответното съответствие съгласно Директива на ЕС и норми за артикул  
 paskaidro šādu atbilstību ES direktīvai un standartiem  
 arībūdina šj atitiktīmā EU reikalavimams ir prekės normoms  
 declară următoarea conformitate conform directivei UE și normelor pentru articolul  
 δηλώνει την ακόλουθη συμμόρφωση σύμφωνα με την Οδηγία ΕΚ και τα πρότυπα για το προϊόν  
 potvrđuje sljedeću usklađenost prema smjernicama EU i normama za artikl  
 potvrđuje sljedeću usklađenost prema smjernicama EU i normama za artikl  
 potvrđuje sledeću usklađenost prema smernicama EZ i normama za artikl  
 следующим удостоверяется, что следующие продукты соответствуют директивам и нормам ЕС  
 проголошує про зазначену нижче відповідність виробу директивам та стандартам ЄС на виріб  
 ja izjavува следната сообрзност согласно EУ-директивата и нормите за артикли  
 Ürünü ile ilgili AB direktifleri ve normları gereğince aşağıda açıklanan uygunluğu belirtir  
 erklærer følgende samsvar i henhold til EU-direktivet og standarder for artikkel  
 Lýsir uppfyllingu EU-reglna og annarra staðla vöru

## Petrol Chainsaw GLPC 4645

- |   |  |
|---|--|
| <input type="checkbox"/> 2006/95/EC             | <input type="checkbox"/> 2006/42/EC  |
| <input type="checkbox"/> 2005/32/EC             | <input checked="" type="checkbox"/> 98/37/EC   |
| <input checked="" type="checkbox"/> 2004/108/EC | <input checked="" type="checkbox"/> Annex IV<br>Notified Body: Intertek<br>Notified Body No.: 0905<br>Reg. No.: 09SHW1193-01 |
| <input type="checkbox"/> 2004/22/EC             | <input checked="" type="checkbox"/> 2000/14/EC_2005/88/EC  |
| <input type="checkbox"/> 1999/5/EC              | <input checked="" type="checkbox"/> Annex V  |
| <input type="checkbox"/> 97/23/EC               | <input type="checkbox"/> Annex VI<br>Noise: measured $L_{WA} = 110$ dB (A); guaranteed $L_{WA} = 116$ dB (A)<br>P = 2 KW;    |
| <input type="checkbox"/> 95/54/EC               |  |
| <input type="checkbox"/> 90/396/EC              |  |
| <input type="checkbox"/> 89/686/EC_96/58/EC     | <input checked="" type="checkbox"/> 97/68/EC<br>Emission No.: e11*97/68SA*2004/26*0825*00                                    |
| <input type="checkbox"/> 87/404/EC              |  |

Standard references: EN ISO 11681-1; EN ISO 14982

Landau/Isar, den 08.05.2009

  
Weichselgartner/General Manager

  
Frank/Product-Management

First CE: 09  
Art.-No.: 45.013.93 I.-No.: 01019  
Subject to change without notice

Archive-File/Record: 4501390-42-4149210-08  
Documents registrar: Robert Mayn  
Wiesenweg 22, D-94405 Landau/Isar

## GUARANTEE CERTIFICATE

**Dear Customer,**

All of our products undergo strict quality checks to ensure that they reach you in perfect condition. In the unlikely event that your device develops a fault, please contact our service department at the address shown on this guarantee card. Of course, if you would prefer to call us then we are also happy to offer our assistance under the service number printed below. Please note the following terms under which guarantee claims can be made:

1. These guarantee terms cover additional guarantee rights and do not affect your statutory warranty rights. We do not charge you for this guarantee.
2. Our guarantee only covers problems caused by material or manufacturing defects, and it is restricted to the rectification of these defects or replacement of the device. Please note that our devices have not been designed for use in commercial, trade or industrial applications. Consequently, the guarantee is invalidated if the equipment is used in commercial, trade or industrial applications or for other equivalent activities. The following are also excluded from our guarantee: compensation for transport damage, damage caused by failure to comply with the installation/assembly instructions or damage caused by unprofessional installation, failure to comply with the operating instructions (e.g. connection to the wrong mains voltage or current type), misuse or inappropriate use (such as overloading of the device or use of non-approved tools or accessories), failure to comply with the maintenance and safety regulations, ingress of foreign bodies into the device (e.g. sand, stones or dust), effects of force or external influences (e.g. damage caused by the device being dropped) and normal wear resulting from proper operation of the device.

The guarantee is rendered null and void if any attempt is made to tamper with the device.

3. The guarantee is valid for a period of 3 years starting from the purchase date of the device. Guarantee claims should be submitted before the end of the guarantee period within two weeks of the defect being noticed. No guarantee claims will be accepted after the end of the guarantee period. The original guarantee period remains applicable to the device even if repairs are carried out or parts are replaced. In such cases, the work performed or parts fitted will not result in an extension of the guarantee period, and no new guarantee will become active for the work performed or parts fitted. This also applies when an on-site service is used.

Of course, we are also happy offer a chargeable repair service for any defects which are not covered by the scope of this guarantee or for units which are no longer covered. To take advantage of this service, please send the device to our service address.

Helpline No. UK/Northern Ireland 0151 6491500 Rep. Ireland 1890 946244

Web Support [www.einhell-uk.co.uk](http://www.einhell-uk.co.uk)

Model Number: 5336

©B

The reprinting or reproduction by any other means, in whole or in part, of documentation and papers accompanying products is permitted only with the express consent of ISC GmbH.

©B Technical changes subject to change

**Helpline No. UK/Northern Ireland 0151 6491500 Rep. Ireland 1890 946244**  
**Web Support [www.einhell-uk.co.uk](http://www.einhell-uk.co.uk)**  
**Model Number: 5336**

